

## **USA464 SIGHT INSTRUCTIONS**

### **WINDAGE ADJUSTMENT**

1. Unscrew the ring no.13 (counter-clock)
2. By hand move the ring no.2, to the right or to the left, following the adjustment needs
3. Screw the ring no. 13

### **ELEVATION ADJUSTMENT**

1. Unscrew the ring no.2 (clockwise)
2. Clutching with a hand the ring no.3, rotate ring no.2 clockwise to obtain the elevation. Counter-clock to lower it.
3. Screw the ring no. 3 (counter-clock)
4. Beware, the maximum elevation is 1" from the lower position.

### **TANG SIGHT BLOCKING**

1. Work on screw no. 4 to obtain a partial block of the tang sight, which will leave it in the possibility to rotate in the rest position.